



SuperSystems
incorporated

This is a guide to set up clock syncing a SUPERDATA server.

PC setup:

1. Navigate to "Control Panel"
2. Click on "Clock and Region"
3. Click on "Set the Time and Date"
4. Click on the "Internet Time" tab
5. If the server is not set to synchronize automatically with a time server then click on "Change Settings"
6. Check the box to "Synchronize with an internet time server"
7. Select the server to sync to.

