



Super**Systems**
incorporated

Model DPC2530
Continuous Digital Dew Point Analyzer

OPERATIONS MANUAL

Super Systems Inc.
7205 Edington Drive
Cincinnati, OH 45249
513-772-0060
800-666-4330
Fax: 513-772-9466
www.supersystems.com

Model DPC2530

Continuous Digital Dew Point Analyzer

For measurement of:

- Endothermic Atmosphere
- Exothermic Atmosphere
- Nitrogen / Hydrogen Atmosphere
- Plant Air Systems



SPECIFICATIONS -

Measurement Range:	-0 to +80°F (-47 to +27°C)
Temperature Range:	0 to 120°F (-18 to +49°C)
Power Supply:	115 VAC 60Hz
Display Type:	LED Digital
Display Resolution:	+/- 1°F (+/- 0.1°C)
Digital Communications:	RS485 Modbus
Control / Retransmission Output:	4 -20 mA
Alarms:	Two Alarm Relays
Size:	11"H x 10"W x 7"D
Weight:	Approximately 8 lb.

Super Systems Inc.

USA Office

Corporate Headquarters:

7205 Edington Drive

Shipping Address:

7245 Edington Drive

Cincinnati, OH 45249

Phone: (513) 772-0060

<http://www.supersystems.com>

Super Systems Europe

Units 3 & 4, 17 Reddicap Trading Estate,

Sutton Coldfield, West Midlands

B75 7BU

UNITED KINGDOM

Phone: +44 (0) 121 329 2627

<http://www.supersystemseurope.com>

Super Systems Mexico

Sistemas Superiores Integrales S de RL de CV

Querétaro, QRO CP, MEXICO 76120

Phone: +52 (442) 410 9040

<http://www.supersystems.com>

Super Systems China

No. 335 XianXia Road

Room 308

Shanghai, CHINA

200336

Phone: +86 21 5206 5701/2

<http://www.supersystems.com>

Super Systems India Pvt. Ltd.

A-26 Mezzanine Floor, FIEE Complex,

Okhla Indl. Area, Phase - 2

New Delhi, India 110 020

Phone: +91 11 41050097

TABLE OF CONTENTS –

SPECIFICATIONS –2
TABLE OF CONTENTS –4
INTRODUCTION –5
WARNINGS –5
TERMINAL BLOCK WIRING –6
INSTRUMENT SETUP –6
STARTUP –8
OPERATION –8
HOW IT WORKS –9
FACTORY CALIBRATION –9
FIELD CALIBRATION –9
RETURNING THE UNIT TO SSI –15
SPARE PARTS –15
APPENDIX “A” (DETERMINING THE DEW POINT IN °F)–16
APPENDIX “B” (DETERMINING THE DEW POINT IN °C) –17
APPENDIX “C” – (DETERMINING THE SENSOR TEMPERATURE IN °F)18
APPENDIX “D” – (DETERMINING THE SENSOR TEMPERATURE IN °C)19
WARRANTY20
REVISION HISTORY –21

INTRODUCTION –

Thank you for selecting Super Systems Inc. and the DPC2530 as your source for accurate dew point measurements.

We have taken every precaution to protect this unit during shipment. Carefully unpack the instrument, and if there are any signs of shipping damage notify SSI and the shipper immediately.

Keep this instruction book in a secure place and refer to it when there is a question about the analyzer.

WARNINGS –


Although it is intended for use in an industrial environment, the DPC2530 is a sensitive piece of analysis equipment. Care should be taken not to operate it in a manner inconsistent with its intended use.

- Moisture (water) cannot be allowed to enter the analyzer. If water is present in the sample gas, use an in-line dryer for sample conditioning. In the event that the sensor becomes wet, use an inert gas (Nitrogen or Argon) to dry the inside of the instrument. Under no circumstances should Methane (Natural Gas) be used to dry the DPC2530.
- The analyzer must be stored at ambient temperature (65-80°F) for at least four hours prior to operation.
- An in-line dryer for sample conditioning should be used for exothermic and combustion applications.
- This unit is not designed to measure the dew points in corrosive gasses, such as Ammonia, SO₃, Chlorine, and HCL.
- Please read and understand this Product Manual before operating the unit.

Failure to comply with these conditions may cause damage to the unit that will not be covered under the warranty. Super Systems, Inc. is not responsible for damage to this unit caused by disregard of these warnings, neglect, or misuse.

TERMINAL BLOCK WIRING –

Power and communications wiring for the DPC2530 should be performed according to the following diagram:

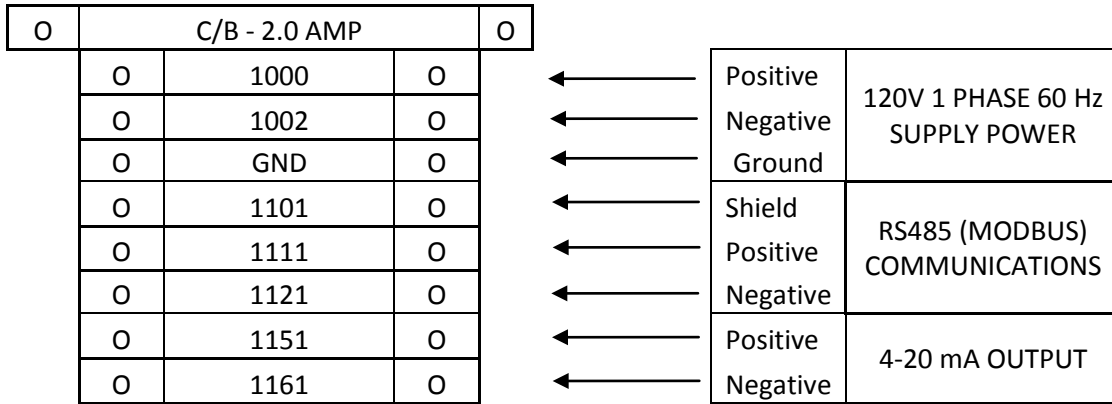

INSTRUMENT SETUP –

The instrument should be fully configured at the factory for immediate use. In the event that the settings are ever lost, the following charts show the appropriate configuration and operative (runtime) parameters for the Series 8 controller. When the instrument is set up in Fahrenheit using these parameters, the input is scaled from -50 to +80°F and the 4-20mA output is scaled from -50 to +80°F. When the instrument is set up in Celsius using these parameters, the input is scaled from -45.6 to +26.7°C and the 4-20mA output is scaled from -45 to +25°C.

<i>Series 8 Configuration Parameters</i>		
Parameter	Fahrenheit	Celsius
P1	MV	MV
P2	NNNN	NNNN
P3	-50	-45.6
P4	80	26.7
P5	0	0
P6	80	80
P7	NONE	NONE
P11	NONE	NONE
P12	NONE	NONE
P13	PV.RT	PV.RT
P14	NONE	NONE

<i>Series 8 Configuration Parameters</i>		
P15	4.20	4.20
Parameter	Fahrenheit	Celsius
P21	NONE	NONE
P24	NONE	NONE
P27	NONE	NONE
P31	NONE	NONE
P32	100	100
P33	NONE	NONE
P34	OFF	OFF
P35	ON	ON
P36	0	0
P37	NONE	NONE
P41	NONE	NONE
P51	T.RRS	T.RRS
P52	T.HLD	T.HLD
P61	1	1
P62	19.20	19.20
P63	NONE	NONE
P64	NONE	NONE
P71	A-M	A-M
P72	T.ST	T.ST
P73	AC.AL	AC.AL
P74	STD	STD
P75	OP	OP
P76	2	2
P77	4	4
P81	NONE	NONE
rEcS	NONE	NONE
rEcL	NONE	NONE
PHAS	NONE	NONE

<i>Series 8 Operative (runtime) Parameters</i>		
Parameter	Fahrenheit	Celsius
OP	0	0
Unit	°F	°C
SPLo	0	0
SPHI	80	26.7
SP1	0	0
SP2	0	0
SP.SL	SP1	SP1
SPrr	OFF	OFF
oFS	0	0
FILt	1.6	1.6
oPLo	0	0
oPHI	0	0
LdAL	OFF	OFF
LEAL	OFF	OFF
Ld.AL	OFF	OFF
HcAL	OFF	OFF
UcAL	IDLE	IDLE

In addition to these parameters, a voltage divider must be installed to the dew point input (This divider is installed at the factory prior to shipment.)

STARTUP -

The DPC2530 Dew Point Analyzer has been calibrated before it was shipped from Super Systems Inc. You can begin typical operation as soon as the unit has been allowed to stabilize in a temperature similar to the temperature in the heat-treating department. This is particularly important for units that may have been sitting overnight in a delivery van in sub-zero weather, since the rapid temperature change can cause condensation on the sensor which will cause the unit to temporarily display inaccurate readings.

OPERATION -

To obtain consistent accurate readings from the DPC2530, be sure that the element in the bowl filter on the side of the instrument is clean and functional. Not only will this ensure that the sample reading is not abnormally high (since soot tends to trap moisture), but it will also prevent soot and other contaminants from entering the unit and damaging the sensor. The optimum flow rate of the sample gas should be between 1.5 and 2.0 Standard Cubic Feet per Hour (SCFH), although a flow rate as low as 1.0 SCFH is acceptable. If the unit is reading less than 1.0 SCFH, verify that there are no obstructions to the flow such as a clogged sample line or a poorly adjusted knob on the DPC2530's flow meter.

Heat Treat Furnace Sampling: A gas sample may be extracted from a process using the built-in pump. The sample tube from which the sample is taken out of the furnace should extend into the furnace past the HOT face of the refractory. For accurate results, a designated sample port should be used to extract the sample. SSI offers a sample port assembly (part number 20263) which is ideal for this purpose. If a designated sample port is not available, then a clean “burn-off” port on a Gold Probe™, an industry leading oxygen sensor for atmosphere control, can be used.

Endothermic Generator Sampling: For applications under pressure, the pump should be switched off and the flow controlled by the small restriction valve on the flow meter. A flow rate between 1.5 and 2.0 SCFH is ideal. The sample should be taken from the endothermic gas manifold after the gas has been cooled. **NOTE: Allow the sample port “to blow out any soot” before connecting the sample tube.** Failure to do so will unnecessarily coat the sample tubing assembly and possibly some internal components with soot, resulting in inaccurate readings and exposing the sensor to potential damage.

HOW IT WORKS –

The dew point sensor is a “dielectric ceramic” that varies its electrical capacitance with changes in relative humidity. The sensor is mounted in a short probe, which is installed in a T-fitting that allows the sample gas to flow past the sensor. The tip of this probe contains the dielectric ceramic relative humidity (RH) sensor, as well as a built in temperature sensor to determine its dry bulb temperature. Information from both of these sensors is used to compute the resultant dew point, which is displayed on the digital LED display.

FACTORY CALIBRATION –

Factory calibration is recommended every six months if the unit is used regularly. SSI’s calibration is NIST traceable and includes a numbered “Certificate of Calibration”. This certificate also indicates the accuracy of the analyzer before and after calibration. Please contact Super Systems at (513) 772-0060 for more information regarding this service.

FIELD CALIBRATION –

It is also possible to calibrate the DPC2530 in the field, which will require the optional calibration kit (Part Number 31030). The instructions for a field calibration are shown here, however please feel free to contact Super Systems at 513-772-0060 if you would like to review the process with us before you begin.

The calibration kit consists of two bottles of saturated salt solution in which each bottle generates a precise relative humidity percentage (R.H.%) value. One bottle is 11.3%


R.H., and the other is 75.3% R.H. These two specific calibration points are already pre-programmed into the microprocessor board.

1.0 Open the unit.

1.1 Undo the latches on the side of the enclosure.

2.0 Locate the key components within the unit.

2.1 The **microprocessor board** is located in the front right side of the unit. This board contains three very small buttons that are used for calibration. Two are next to one another, and they are marked “75.3%” and “11.3%”, while the other has no label. The unmarked button is the “Calibrate” button. The approximate locations of each button are shown on this diagram:

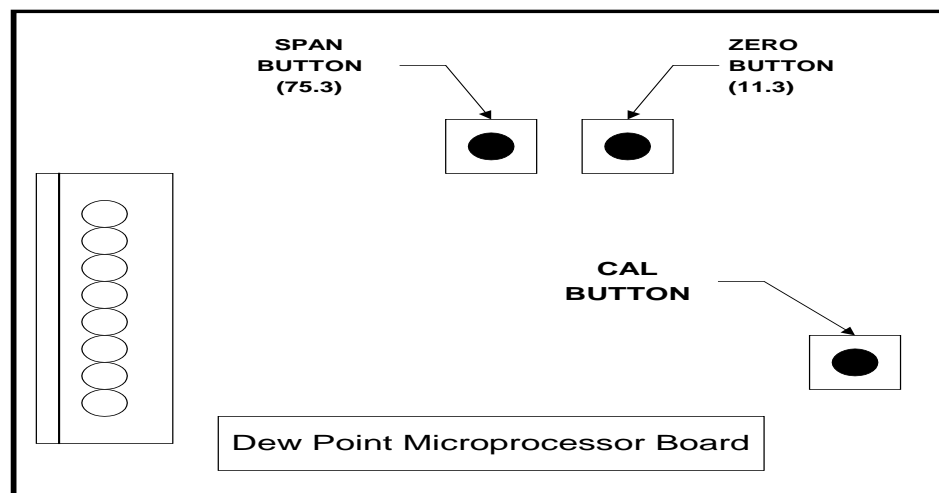

2.2 The **sensor-sampling chamber** is located in the bottom left of the unit. It is the gray rectangular box with brass barb fittings on either side and a black plastic gland protruding from the center.

2.3 The **sensor probe** is positioned in the sensor sampling chamber. It is held in place by the nut on the black plastic gland.

3.0 Remove the sensor probe from the sensor-sampling chamber.

3.1 Loosen the black plastic gland nut and slowly slide the sensor probe out through the airtight seal. Care must be taken when removing this sensor probe, since the tip is very delicate and can be easily damaged if it is mishandled. Note that the probe has white mark at the wire entry point, which must be aligned with corresponding white mark in plastic gland when it is re-inserted in the sampling chamber.

- 4.0 Install the sensor probe into the 75.3% salt solution.
 - 4.1 Slip the black sensor gland (supplied in the calibration kit) over the sensor probe with the sensor tip protruding from the threaded end of the gland and the sensor wires being flush with the top of the rubber o-ring in the gland. Tighten the gland around the sensor. This does not need to be done with a wrench or other tools, but it does need to be tight enough to prevent ambient air from contaminating the humidity level of the sampling chamber.
 - 4.2 Remove the cap of the 75.3% salt solution and install the sensor gland (with the sensor) into the salt solution. To increase the life of the calibration salts, an effort should be made to minimize the amount of time that the salt solution is exposed to the ambient air.
- 5.0 Allow the sensor to reach equilibrium with the calibration salt.
 - 5.1 With the power to the unit still turned off, leave the sensor in the calibration salt for a minimum of eighteen (18) hours. It is acceptable to leave the sensor in the salt solution for a longer period of time, even a few days, if desired.
- 6.0 Begin the 75.3% (Span) calibration process.
 - 6.1 After leaving the sensor in the salt for at least eighteen (18) hours, turn the unit on. The reading on the display is not important at this point.
 - 6.2 Simultaneously press the “75.3%” and “Calibration” buttons on the microprocessor board.
- 7.0 Verify the 75.3% (Span) calibration.
 - 7.1 Do not be concerned if the unit does not display 75.3, since it is not supposed to match the value of the calibration salt.
 - 7.2 Use the “Sensor Temp” switch on the faceplate of the unit to determine and record the sensor temperature.
 - 7.3 Look up this temperature on the “Theoretical Dew Point Values for Calibration Verification” chart located in the back of this manual. Appendix “A” will show the temperature values in Fahrenheit, and Appendix B will show the temperature values in Celsius.
 - 7.4 Next to the appropriate temperature, note the number in the corresponding column titled “75.3%”. This should match with the dew point that is shown on the display of the DPC2530.

8.0 Determine the acceptability of the reading.

8.1 The value printed on the chart in Appendix A is a theoretical value, and some variation can be expected. When a calibration is performed at SSI, we certify (in writing) that the unit displays within +/- 1 degree of the theoretical value after it has been calibrated. We would not consider a calibration to be successful unless it is within +/- 1 degree, however in the case of a field calibration, this degree of accuracy may or may not be required. The degree of accuracy that is acceptable is determined by the policy of the person performing the calibration.

NOTE: Keep in mind that the DPC2530 only displays whole numbers, and not tenths of a degree. Therefore, a reading of 65°F could be as low as 64.50 or as high as 65.49.

9.0 Allow the sensor to achieve equilibrium at ambient atmosphere.

9.1 After the 75.3% (Span) calibration has been completed, remove the sensor from the calibration salt and replace the cap on the salt.

9.2 Leave the sensor probe in the gland and while the unit is still on, allow it to achieve equilibrium at the ambient atmosphere in the room. This is accomplished by simply leaving the sensor exposed to ambient air for between two and three minutes. You will know when this has been accomplished when the numbers on the display begin to stabilize.

10.0 Install the sensor probe into the 11.3% salt solution.

10.1 Remove the cap of the 11.3% salt solution and install the sensor gland (with the sensor) into the salt solution. To increase the life of the calibration salts, an effort should be made to minimize the amount of time that the salt solution is exposed to the ambient air.

10.2 Turn the unit off.

11.0 Allow the sensor to reach equilibrium with the calibration salt.

11.1 With the power to the unit still turned off, leave the sensor in the calibration salt for a minimum of twenty-four (24) hours. It is acceptable to leave the sensor in the salt solution for a longer period of time, even a few days, if desired.

12.0 Begin the 11.3% (Zero) calibration process

- 12.1 After leaving the sensor in the salt for at least twenty-four (24) hours, turn the unit on. The reading on the display is not important at this point.
- 12.2 Simultaneously press the “11.3%” and “Calibration” buttons on the microprocessor board.
- 13.0 Verify the 11.3% (Zero) calibration
 - 13.1 Do not be concerned if the unit does not display 11.3, since it is not supposed to match the value of the calibration salt.
 - 13.2 Use the “Sensor Temp” switch on the face plate of the unit to determine and record the sensor temperature.
 - 13.3 Look up this temperature on the “Theoretical Dew Point Values for Calibration Verification” chart located in the back of this manual. Appendix “A” will show the temperature values in Fahrenheit, and Appendix B will show the temperature values in Celsius.
 - 13.4 Next to the appropriate temperature, note the number in the corresponding column titled “11.3%”. This should match with the dew point that is shown on the display of the DPC2530.
- 14.0 Determine the acceptability of the reading.
 - 14.1 The value printed on the chart in Appendix A is a theoretical value, and some variation can be expected. When a calibration is performed at SSI, we certify (in writing) that the unit displays within +/- 1 degree of the theoretical value after it has been calibrated. We would not consider a calibration to be successful unless it is within +/- 1 degree, however in the case of a field calibration, this degree of accuracy may or may not be required. The degree of accuracy that is acceptable is determined by the policy of the person performing the calibration.

NOTE: Keep in mind that the DPC2530 only displays whole numbers, and not tenths of a degree. Therefore, a reading of 18°F could be as low as 17.50 or as high as 18.49.
- 15.0 Allow the sensor to achieve equilibrium at ambient atmosphere.
 - 15.1 After the 11.3% (Zero) calibration has been completed, remove the sensor from the calibration salt and replace the cap.
 - 15.2 Leave the sensor probe in the gland and while the unit is still on, allow it to achieve equilibrium at the ambient atmosphere in the room. This should

take between two and three minutes. You will know when this has been accomplished when the numbers on the display begin to stabilize.

16.0 Re-assemble the unit.

16.1 After the calibration process has been completed, remove the sensor probe from the gland and return it to the sensor-sampling chamber, taking care to position it properly. The white mark on the sensor probe should face towards the right of the sensor-sampling chamber (at 3:00 if it were the face of a clock.). If the white mark is not visible, then it should be placed so the sample flow directly strikes the face of the mirror on the sensor tip (the sample flows from right-to-left). In other words, the mirror should face the incoming gas stream.

16.2 Hand-tighten the black sensor gland to prevent air from leaking out of the sampling chamber.

16.3 Verify that the system is leak proof by turning on the pump and placing a finger over the sample inlet port. The flow meter will drop to zero if there are no leaks. If a leak is detected, make sure that all tubing connections are tight, especially the black sensor gland.

16.4 After the unit has passed the leak test, the enclosure door can be closed.

17.0 Make sure that all caps are replaced on the calibration salts, and return the DPC2530 to service.

RETURNING THE UNIT TO SSI –

This analyzer contains some components that may require periodic replacement based on the amount of use that the unit experiences and the methods in which it is used. If service on the unit is necessary, it should be sent back to Super Systems, Inc. for repair. To minimize damage to the mounting feet on the enclosure, it is possible to unscrew them and rotate them 180 degrees (so they point into the enclosure instead of away from it). This will reduce the likelihood that they will be damaged during shipment. If the original packaging is not available, the analyzer should be surrounded by impact-absorbing materials and placed in a box. It is the responsibility of the shipper to ensure that the DPC2530 arrives at SSI undamaged.

Before shipping the analyzer, please call 513-772-0060 to receive a Return Materials Authorization (RMA) number. The shipping address that should be used for returns is:

**Super Systems, Inc.
ATTN: RMA #XXXX
7205 Edington Drive
Cincinnati, OH 45249**

SPARE PARTS –

To simplify the ordering of replacement parts, the following is a list of some of the components that may be requested:

Description	Part No.
Factory Calibration	13045
Sample Pump	31401
Filter	37048
Replacement filter element	31027
Flow meter	36027
808 Display/Controller	31343
Dew Point Sensor	A20881
Calibration Kit	31030
24VDC Power Supply	31125
Voltage Divider	31188

APPENDIX “A” (Determining the Dew Point in °F)–

Theoretical Dew Point Values For Calibration Verification (Fahrenheit)

Temp (°F)	Percent RH	
	11.3%	75.3%
69.00	12.94	60.86
69.10	13.01	60.96
69.20	13.09	61.06
69.30	13.17	61.16
69.40	13.25	61.25
69.50	13.33	61.35
69.60	13.40	61.45
69.70	13.48	61.54
69.80	13.56	61.64
69.90	13.63	61.74
70.00	13.71	61.83
70.10	13.79	61.93
70.20	13.87	62.03
70.30	13.95	62.12
70.40	14.02	62.22
70.50	14.10	62.32
70.60	14.18	62.41
70.70	14.26	62.51
70.80	14.33	62.60
70.90	14.41	62.70
71.00	14.49	62.80
71.10	14.57	62.89
71.20	14.65	62.99
71.30	14.72	63.09
71.40	14.80	63.18
71.50	14.88	63.28
71.60	14.96	63.38
71.70	15.03	63.47
71.80	15.11	63.57
71.90	15.19	63.67
72.00	15.27	63.76
72.10	15.34	63.86
72.20	15.42	63.96
72.30	15.50	64.05
72.40	15.58	64.15
72.50	15.65	64.25
72.60	15.73	64.34

Temp (°F)	Percent RH	
	11.3%	75.3%
72.70	15.81	64.44
72.80	15.89	64.54
72.90	15.97	64.63
73.00	16.04	64.73
73.10	16.12	64.82
73.20	16.20	64.92
73.30	16.28	65.02
73.40	16.35	65.11
73.50	16.43	65.21
73.60	16.51	65.31
73.70	16.59	65.40
73.80	16.66	65.50
73.90	16.74	65.60
74.00	16.82	65.69
74.10	16.90	65.79
74.20	16.97	65.89
74.30	17.05	65.98
74.40	17.13	66.08
74.50	17.21	66.18
74.60	17.28	66.27
74.70	17.36	66.37
74.80	17.44	66.47
74.90	17.52	66.56
75.00	17.59	66.66
75.10	17.67	66.76
75.20	17.75	66.85
75.30	17.83	66.95
75.40	17.90	67.04
75.50	17.98	67.14
75.60	18.06	67.24
75.70	18.14	67.33
75.80	18.21	67.43
75.90	18.29	67.53
76.00	18.37	67.62
76.10	18.44	67.72
76.20	18.52	67.82
76.30	18.60	67.91

Temp (°F)	Percent RH	
	11.3%	75.3%
76.40	18.68	68.01
76.50	18.75	68.11
76.60	18.83	68.20
76.70	18.91	68.30
76.80	18.99	68.40
76.90	19.06	68.49
77.00	19.14	68.59
77.10	19.22	68.69
77.20	19.30	68.78
77.30	19.37	68.88
77.40	19.45	68.97
77.50	19.53	69.07
77.60	19.61	69.17
77.70	19.68	69.26
77.80	19.76	69.36
77.90	19.84	69.46
78.00	19.91	69.55
78.10	19.99	69.65
78.20	20.07	69.75
78.30	20.14	69.84
78.40	20.22	69.94
78.50	20.30	70.04
78.60	20.38	70.13
78.70	20.46	70.23
78.80	20.53	70.33
78.90	20.61	70.42
79.00	20.69	70.52
79.10	20.76	70.61
79.20	20.84	70.71
79.30	20.92	70.81
79.40	21.00	70.90
79.50	21.07	71.00
79.60	21.15	71.10
79.70	21.23	71.19
79.80	21.31	71.29
79.90	21.38	71.39
80.00	21.46	71.48

APPENDIX “B” (Determining the Dew Point in °C) –

Theoretical Dew Point Values For Calibration Verification (Celsius)

Temp (°C)	Percent RH	
	11.3%	75.3%
20.56	-10.59	16.03
20.61	-10.55	16.09
20.67	-10.51	16.14
20.72	-10.46	16.20
20.78	-10.42	16.25
20.83	-10.37	16.31
20.89	-10.33	16.36
20.94	-10.29	16.41
21.00	-10.24	16.47
21.06	-10.21	16.52
21.11	-10.16	16.57
21.17	-10.12	16.63
21.22	-10.07	16.68
21.28	-10.03	16.73
21.33	-9.99	16.79
21.39	-9.94	16.84
21.44	-9.90	16.89
21.50	-9.86	16.95
21.56	-9.82	17.00
21.61	-9.77	17.06
21.67	-9.73	17.11
21.72	-9.68	17.16
21.78	-9.64	17.22
21.83	-9.60	17.27
21.89	-9.56	17.32
21.94	-9.51	17.38
22.00	-9.47	17.43
22.06	-9.43	17.48
22.11	-9.38	17.54
22.17	-9.34	17.59
22.22	-9.29	17.64
22.28	-9.26	17.70
22.33	-9.21	17.76
22.39	-9.17	17.81
22.44	-9.12	17.86
22.50	-9.08	17.92
22.56	-9.04	17.97

Temp (°C)	Percent RH	
	11.3%	75.3%
22.61	-8.99	18.02
22.67	-8.95	18.08
22.72	-8.91	18.13
22.78	-8.87	18.18
22.83	-8.82	18.23
22.89	-8.78	18.29
22.94	-8.73	18.34
23.00	-8.69	18.39
23.06	-8.65	18.45
23.11	-8.61	18.51
23.17	-8.56	18.56
23.22	-8.52	18.61
23.28	-8.48	18.67
23.33	-8.43	18.72
23.39	-8.39	18.77
23.44	-8.35	18.83
23.50	-8.31	18.88
23.56	-8.26	18.93
23.61	-8.22	18.99
23.67	-8.18	19.04
23.72	-8.13	19.09
23.78	-8.09	19.15
23.83	-8.04	19.20
23.89	-8.01	19.26
23.94	-7.96	19.31
24.00	-7.92	19.36
24.06	-7.87	19.42
24.11	-7.83	19.47
24.17	-7.79	19.52
24.22	-7.74	19.58
24.28	-7.70	19.63
24.33	-7.66	19.68
24.39	-7.62	19.74
24.44	-7.57	19.79
24.50	-7.53	19.84
24.56	-7.49	19.90
24.61	-7.44	19.95

Temp (°C)	Percent RH	
	11.3%	75.3%
24.67	-7.40	20.01
24.72	-7.36	20.06
24.78	-7.32	20.11
24.83	-7.27	20.17
24.89	-7.23	20.22
24.94	-7.19	20.27
25.00	-7.14	20.33
25.06	-7.10	20.38
25.11	-7.06	20.43
25.17	-7.02	20.49
25.22	-6.97	20.54
25.28	-6.93	20.59
25.33	-6.88	20.65
25.39	-6.84	20.70
25.44	-6.80	20.76
25.50	-6.76	20.81
25.56	-6.72	20.86
25.61	-6.67	20.92
25.67	-6.63	20.97
25.72	-6.59	21.02
25.78	-6.54	21.08
25.83	-6.50	21.13
25.89	-6.46	21.18
25.94	-6.41	21.24
26.00	-6.37	21.29
26.06	-6.33	21.34
26.11	-6.28	21.40
26.17	-6.24	21.45
26.22	-6.20	21.51
26.28	-6.16	21.56
26.33	-6.11	21.61
26.39	-6.07	21.67
26.44	-6.03	21.72
26.50	-5.98	21.77
26.56	-5.94	21.83
26.61	-5.90	21.88
26.67	-5.86	21.93

APPENDIX “C” – (Determining the sensor temperature in °F)

When the DC voltage between 5(+) and 8(-) is:	Then the sensor temperature (°F) is:
0.3472	67.0
0.3478	67.2
0.3483	67.4
0.3489	67.6
0.3494	67.8
0.3500	68.0
0.3506	68.2
0.3511	68.4
0.3517	68.6
0.3522	68.8
0.3528	69.0
0.3533	69.2
0.3539	69.4
0.3544	69.6
0.3550	69.8
0.3556	70.0
0.3561	70.2
0.3567	70.4
0.3572	70.6
0.3578	70.8
0.3583	71.0
0.3589	71.2
0.3594	71.4
0.3600	71.6
0.3606	71.8
0.3611	72.0
0.3617	72.2
0.3622	72.4
0.3628	72.6
0.3633	72.8
0.3639	73.0
0.3644	73.2
0.3650	73.4
0.3656	73.6
0.3661	73.8
0.3667	74.0
0.3672	74.2
0.3678	74.4
0.3683	74.6
0.3689	74.8
0.3694	75.0
0.3700	75.2
0.3706	75.4
0.3711	75.6
0.3717	75.8
0.3722	76.0
0.3728	76.2
0.3733	76.4
0.3739	76.6
0.3744	76.8
0.3750	77.0
0.3756	77.2
0.3761	77.4
0.3767	77.6
0.3772	77.8
0.3778	78.0
0.3783	78.2
0.3789	78.4
0.3794	78.6
0.3800	78.8

When the DC voltage between 5(+) and 8(-) is:	Then the sensor temperature (°F) is:
0.3806	79.0
0.3811	79.2
0.3817	79.4
0.3822	79.6
0.3828	79.8
0.3833	80.0
0.3839	80.2
0.3844	80.4
0.3850	80.6
0.3856	80.8
0.3861	81.0
0.3867	81.2
0.3872	81.4
0.3878	81.6
0.3883	81.8
0.3889	82.0
0.3894	82.2
0.3900	82.4
0.3906	82.6
0.3911	82.8
0.3917	83.0
0.3922	83.2
0.3928	83.4
0.3933	83.6
0.3939	83.8
0.3944	84.0
0.3950	84.2
0.3956	84.4
0.3961	84.6
0.3967	84.8
0.3972	85.0
0.3978	85.2
0.3983	85.4
0.3989	85.6
0.3994	85.8
0.4000	86.0
0.4006	86.2
0.4011	86.4
0.4017	86.6
0.4022	86.8
0.4028	87.0
0.4033	87.2
0.4039	87.4
0.4044	87.6
0.4050	87.8
0.4056	88.0
0.4061	88.2
0.4067	88.4
0.4072	88.6
0.4078	88.8
0.4083	89.0
0.4089	89.2
0.4094	89.4
0.4100	89.6
0.4106	89.8
0.4111	90.0
0.4117	90.2
0.4122	90.4
0.4128	90.6
0.4133	90.8

When the DC voltage between 5(+) and 8(-) is:	Then the sensor temperature (°F) is:
0.4139	91.0
0.4144	91.2
0.4150	91.4
0.4156	91.6
0.4161	91.8
0.4167	92.0
0.4172	92.2
0.4178	92.4
0.4183	92.6
0.4189	92.8
0.4194	93.0
0.4200	93.2
0.4206	93.4
0.4211	93.6
0.4217	93.8
0.4222	94.0
0.4228	94.2
0.4233	94.4
0.4239	94.6
0.4244	94.8
0.4250	95.0
0.4256	95.2
0.4261	95.4
0.4267	95.6
0.4272	95.8
0.4278	96.0
0.4283	96.2
0.4289	96.4
0.4294	96.6
0.4300	96.8
0.4306	97.0
0.4311	97.2
0.4317	97.4
0.4322	97.6
0.4328	97.8
0.4333	98.0
0.4339	98.2
0.4344	98.4
0.4350	98.6
0.4356	98.8
0.4361	99.0
0.4367	99.2
0.4372	99.4
0.4378	99.6
0.4383	99.8
0.4389	100.0
0.4394	100.2
0.4400	100.4
0.4406	100.6
0.4411	100.8
0.4417	101.0
0.4422	101.2
0.4428	101.4
0.4433	101.6
0.4439	101.8
0.4444	102.0
0.4450	102.2
0.4456	102.4
0.4461	102.6
0.4467	102.8

APPENDIX “D” – (Determining the sensor temperature in °C)

When the DC voltage between 5(+) and 8(-) is:	Then the sensor temperature (°C) is:
0.3472	19.4
0.3478	19.6
0.3483	19.7
0.3489	19.8
0.3494	19.9
0.3500	20.0
0.3506	20.1
0.3511	20.2
0.3517	20.3
0.3522	20.4
0.3528	20.6
0.3533	20.7
0.3539	20.8
0.3544	20.9
0.3550	21.0
0.3556	21.1
0.3561	21.2
0.3567	21.3
0.3572	21.4
0.3578	21.6
0.3583	21.7
0.3589	21.8
0.3594	21.9
0.3600	22.0
0.3606	22.1
0.3611	22.2
0.3617	22.3
0.3622	22.4
0.3628	22.6
0.3633	22.7
0.3639	22.8
0.3644	22.9
0.3650	23.0
0.3656	23.1
0.3661	23.2
0.3667	23.3
0.3672	23.4
0.3678	23.6
0.3683	23.7
0.3689	23.8
0.3694	23.9
0.3700	24.0
0.3706	24.1
0.3711	24.2
0.3717	24.3
0.3722	24.4
0.3728	24.6
0.3733	24.7
0.3739	24.8
0.3744	24.9
0.3750	25.0
0.3756	25.1
0.3761	25.2
0.3767	25.3
0.3772	25.4
0.3778	25.6
0.3783	25.7
0.3789	25.8
0.3794	25.9
0.3800	26.0

When the DC voltage between 5(+) and 8(-) is:	Then the sensor temperature (°C) is:
0.3806	26.1
0.3811	26.2
0.3817	26.3
0.3822	26.4
0.3828	26.6
0.3833	26.7
0.3839	26.8
0.3844	26.9
0.3850	27.0
0.3856	27.1
0.3861	27.2
0.3867	27.3
0.3872	27.4
0.3878	27.6
0.3883	27.7
0.3889	27.8
0.3894	27.9
0.3900	28.0
0.3906	28.1
0.3911	28.2
0.3917	28.3
0.3922	28.4
0.3928	28.6
0.3933	28.7
0.3939	28.8
0.3944	28.9
0.3950	29.0
0.3956	29.1
0.3961	29.2
0.3967	29.3
0.3972	29.4
0.3978	29.6
0.3983	29.7
0.3989	29.8
0.3994	29.9
0.4000	30.0
0.4006	30.1
0.4011	30.2
0.4017	30.3
0.4022	30.4
0.4028	30.6
0.4033	30.7
0.4039	30.8
0.4044	30.9
0.4050	31.0
0.4056	31.1
0.4061	31.2
0.4067	31.3
0.4072	31.4
0.4078	31.6
0.4083	31.7
0.4089	31.8
0.4094	31.9
0.4100	32.0
0.4106	32.1
0.4111	32.2
0.4117	32.3
0.4122	32.4
0.4128	32.6
0.4133	32.7

When the DC voltage between 5(+) and 8(-) is:	Then the sensor temperature (°C) is:
0.4139	32.8
0.4144	32.9
0.4150	33.0
0.4156	33.1
0.4161	33.2
0.4167	33.3
0.4172	33.4
0.4178	33.6
0.4183	33.7
0.4189	33.8
0.4194	33.9
0.4200	34.0
0.4206	34.1
0.4211	34.2
0.4217	34.3
0.4222	34.4
0.4228	34.6
0.4233	34.7
0.4239	34.8
0.4244	34.9
0.4250	35.0
0.4256	35.1
0.4261	35.2
0.4267	35.3
0.4272	35.4
0.4278	35.6
0.4283	35.7
0.4289	35.8
0.4294	35.9
0.4300	36.0
0.4306	36.1
0.4311	36.2
0.4317	36.3
0.4322	36.4
0.4328	36.6
0.4333	36.7
0.4339	36.8
0.4344	36.9
0.4350	37.0
0.4356	37.1
0.4361	37.2
0.4367	37.3
0.4372	37.4
0.4378	37.6
0.4383	37.7
0.4389	37.8
0.4394	37.9
0.4400	38.0
0.4406	38.1
0.4411	38.2
0.4417	38.3
0.4422	38.4
0.4428	38.6
0.4433	38.7
0.4439	38.8
0.4444	38.9
0.4450	39.0
0.4456	39.1
0.4461	39.2
0.4467	39.3

Warranty

Limited Warranty for Super Systems Products:

The Limited Warranty applies to new Super Systems Inc. (SSI) products purchased direct from SSI or from an authorized SSI dealer by the original purchaser for normal use. SSI warrants that a covered product is free from defects in materials and workmanship, with the exceptions stated below.

The limited warranty does not cover damage resulting from commercial use, misuse, accident, modification or alteration to hardware or software, tampering, unsuitable physical or operating environment beyond product specifications, improper maintenance, or failure caused by a product for which SSI is not responsible. There is no warranty of uninterrupted or error-free operation. There is no warranty for loss of data—you must regularly back up the data stored on your product to a separate storage product. There is no warranty for product with removed or altered identification labels. SSI DOES NOT PROVIDE ANY OTHER WARRANTIES OF ANY KIND, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF IMPLIED WARRANTIES, SO THIS LIMITATION MAY NOT APPLY TO YOU. SSI is not responsible for returning to you product which is not covered by this limited warranty.

If you are having trouble with a product, before seeking limited warranty service, first follow the troubleshooting procedures that SSI or your authorized SSI dealer provides.

SSI will replace the PRODUCT with a functionally equivalent replacement product, transportation prepaid after PRODUCT has been returned to SSI for testing and evaluation. SSI may replace your product with a product that was previously used, repaired and tested to meet SSI specifications. You receive title to the replaced product at delivery to carrier at SSI shipping point. You are responsible for importation of the replaced product, if applicable. SSI will not return the original product to you; therefore, you are responsible for moving data to another media before returning to SSI, if applicable. Data Recovery is not covered under this warranty and is not part of the warranty returns process. SSI warrants that the replaced products are covered for the remainder of the original product warranty or 90 days, whichever is greater.

REVISION HISTORY -

Rev.	Description	Date
A	Initial Release as DP2500	11-01-2000
B	Updated for use with 7EK controller	07-11-2001
C	General update	11-01-2001
D	Assigned manual number, added wiring charts, general update	04-18-2003
E	SSi address update, general update	04-14-2005
F	Added charts for Determining sensor temperature in F and C, MCO 2087	10/14/2011
G	Updated parameters table and terminal wiring block for Series 8 Controller, added operative parameters table, removed jumper text and replaced with voltage divider text, updated cover photo,	09/22/2016
H	Updated spare parts list with new SSi Sensor	12/9/16